


P88.20-2568-09

- | | | |
|---|--|--|
| <p>1 Front bumper</p> <p>2 Bolts</p> <p>3 Bolt</p> <p>4 Terminal strip</p> <p>5 Bolt</p> <p>6 Bolts</p> | <p>7 Electrical connector</p> <p>8 Mount</p> <p>B14 Outside temperature display temperature sensor</p> | <p>E5/1 Left fog lamp</p> <p>E5/2 Right fog lamp</p> <p>X26/27 Front PTS separation point (with code (220a) Parktronic system (PTS))</p> |
|---|--|--|

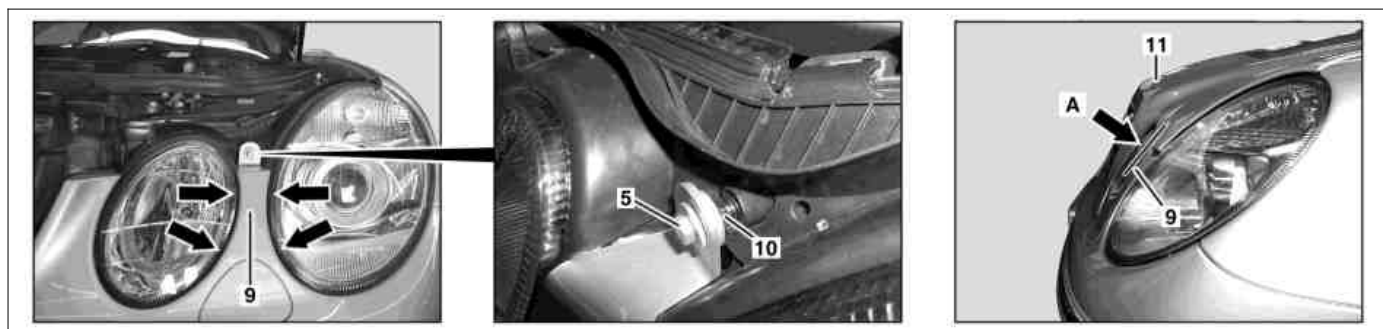

P88.20-2569-07



Shown on left side of front bumper


- | | | |
|---------------------------------|-------------------------|-----------------------|
| <p>5 Bolt</p> <p>9 Shoulder</p> | <p>10 Adjusting nut</p> | <p>11 Engine hood</p> |
|---------------------------------|-------------------------|-----------------------|

Modification notes

15.1.04	Disconnect/connect/remove ground lead from battery	
---------	--	--

	Remove		
1	Open engine hood (11)	See Operating Instructions	
2	Remove front fender liner section from left and right front fender		AR88.10-P-1310T
3	Unscrew bolts (2)		
4	Loosen bolt (3), slide terminal strip (4) toward front and remove	Remove terminal strip (4) from left and right fender.	
5.1	Disconnect front PTS separation point (X26/27)	On vehicles with code (220a) Parktronic system (PTS)	
6	Disconnect electrical connector (7) from left fog lamp (E5/1) and right fog lamp (E5/2)		

7	Unclip outside temperature display temperature sensor (B14) from front bumper (1)		
8	Unscrew bolts (5)		
9	Remove bolts (6)		
10	Remove front bumper (1) toward front with aid of helper	ⓘ Carefully remove front bumper (1) with aid of helper to prevent paint damage on left and right fender and on front bumper (1)	
	Install		
11	Insert front bumper (1) into left and right mount (8) at side	ⓘ Carefully remove front bumper (1) with aid of helper to prevent paint damage on left and right fender and on front bumper (1)	
12	Screw in bolts (6)		
13	Clip outside temperature display temperature sensor (B14) into front bumper (1).		
14	Connect electrical connector (7) to left fog lamp (E5/1) and right fog lamp (E5/2)		
15.1	Connect front PTS separation point (X26/27)	On vehicles with code (220a) Parktronic system (PTS)	
16	Screw in bolts (2)		
17	Install terminal strip (4) on left and right front fender and tighten bolts (3).		
18	Screw in bolts (5)	ⓘ Screw in bolts (5) so that left and right stay (9) can still be moved	
19	Adjust transition (arrow A) between stay (9) and engine hood (11) with adjustment nut (10)	ⓘ The stay (9) and the closed engine hood (11) should have the same height on the transition (arrow A). Adjust stays (9) at both front headlamps	
20	Align stay (9) between front headlamps and tighten bolt (5).	ⓘ The gaps (arrows) between the front headlamp and the stay (9) should have the same width. Adjust stays (9) at both front headlamps 	*129589032100
21	Close engine hood (11)	ⓘ See Operating Instructions	
22	Correct adjustment of left fog lamp (E5/1) and right fog lamp (E5/2), adjust if necessary Check and correct headlamp adjustment		AP82.10-P-8260T

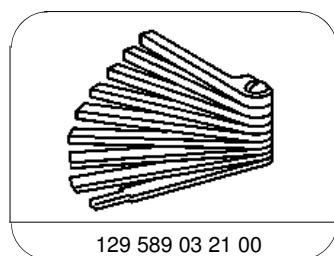

129 589 03 21 00

Feeler gauge