

P54.15-2757-09

Shown on model 221


F1/6 Right instrument panel fuse box
 F1/7 Left instrument panel fuse box

F32 Front pre-fuse
 N10/1 Front SAM control unit with fuse and relay module

N10/2 Rear SAM control unit with fuse and relay module

Illustrated on model 221

N82/1 Vehicle power supply control unit

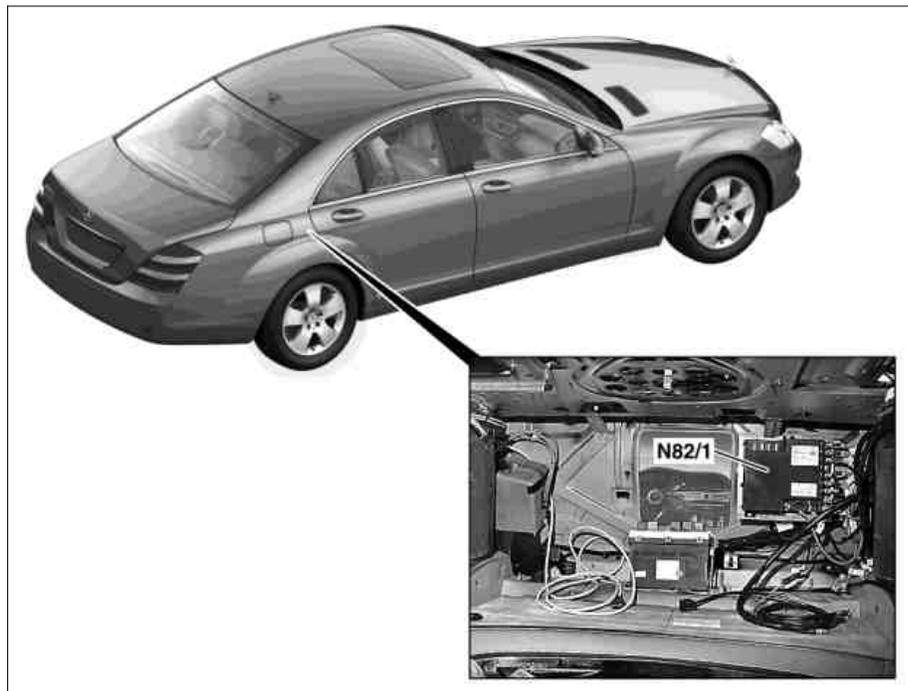

P54.15-2790-06

	Fuse assignment of fuse and relay box in left engine compartment		GF54.15-P-1256-03SX
	Relay assignment of fuse and relay box in left side of engine compartment		GF54.15-P-1257-03SX
	Fuse assignment of fuse and relay box in trunk		GF54.15-P-1256-06SX
	Relay assignment of fuse and relay box in trunk		GF54.15-P-1257-04SX
	Fuse assignment of front pre-fuse box		GF54.15-P-1256-07SX
	Fuse assignment of fuse box in right of		GF54.15-P-1256-12SX

	Fuse assignment of fuse box in left of cockpit		GF54.15-P-1256-13SX
	Fuse assignment of the vehicle power supply control unit		GF54.15-P-1256-17SX