


Model 213, 238, 253, 257, 290

Shown on model 253


- 1 Right rear engine compartment paneling
- 2 Locks
- 4 Air duct segment

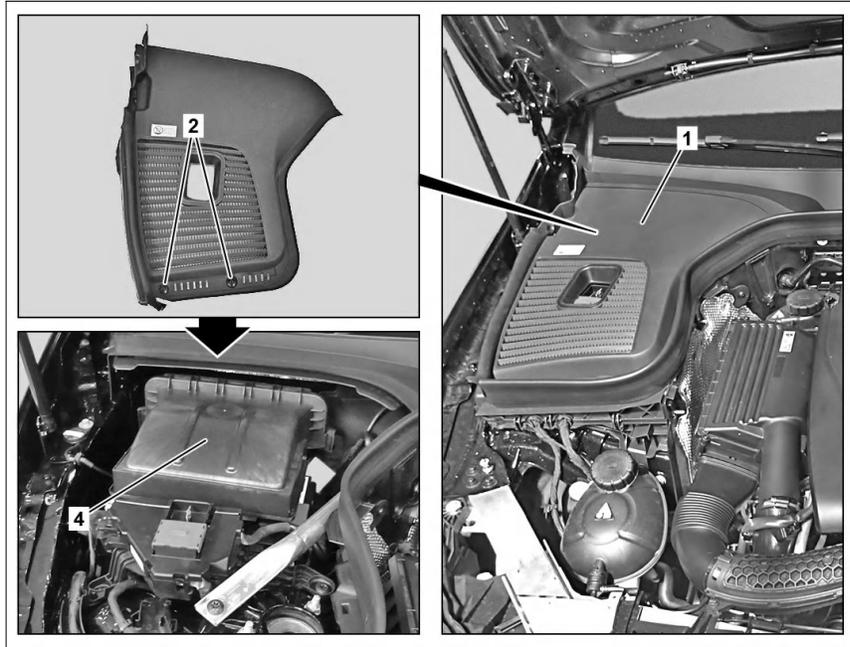

P83.00-2435-06

Shown on model 253

- 3 Dust filter
- A Bracket
- B Bracket

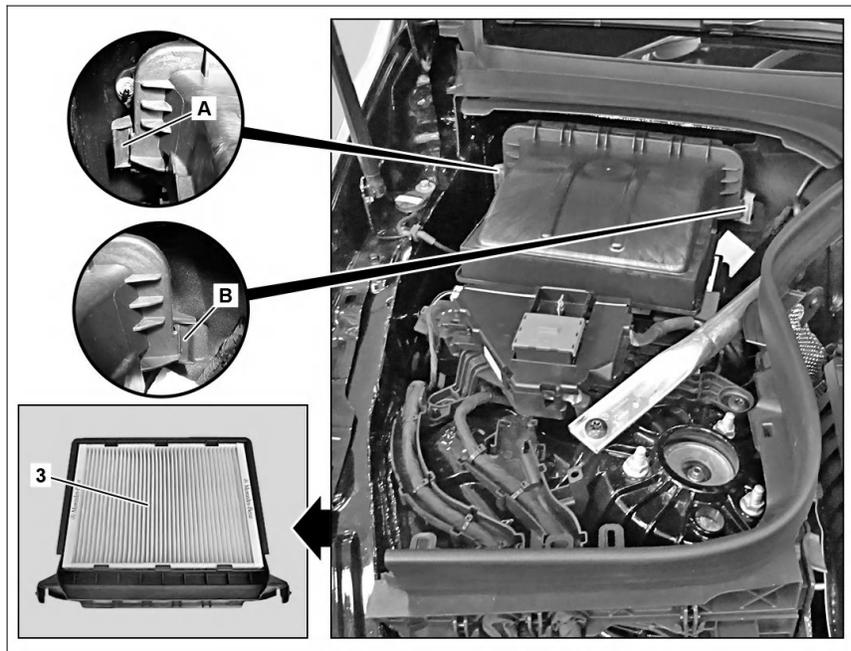

P83.00-2436-06

	Remove		
1	Release locks (2) and remove right rear engine compartment cover (1).		
2	Unhook holder (A) and holder (B) from air duct segment (4) and remove air duct segment (4).		
3	Remove dust filter (3) from air duct segment (4).		
	Clean		
4	Clean inside of air duct segment (4).		
	Install		
5	Insert new dust filter (3) into air duct segment (4).		

6	Install air duct segment (4).		
7	Hook holder (A) and holder (B) into place.		
8	Install right rear engine compartment cover (1) and close locks (2).		