


GF27.19-P-5105G	Kickdown switch, location/task/design/function	17.6.97
-----------------	--	---------

**TRANSMISSION 722.6 in MODEL 163**  
without touch shift

*Shown in model 202*

*S16/6 Kickdown switch*

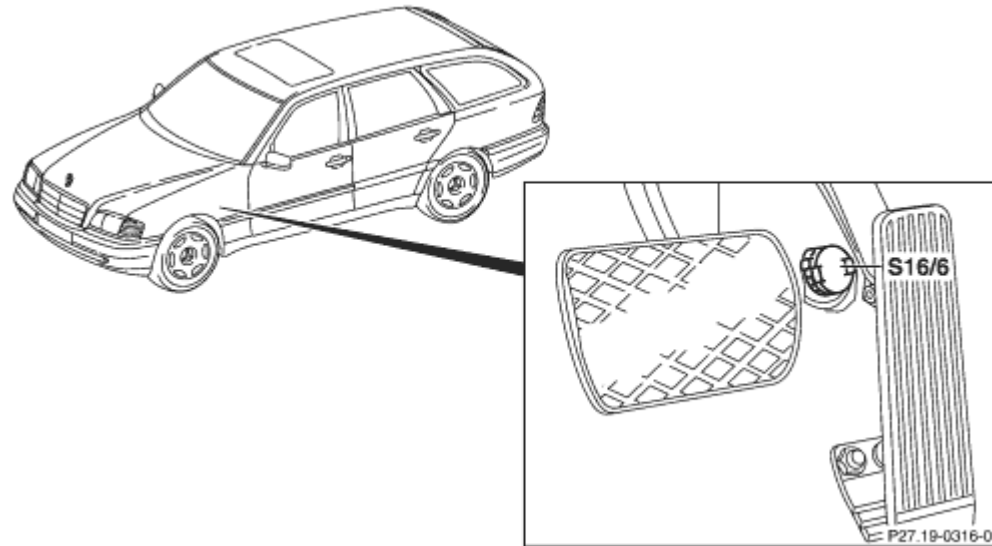

P27.19-2126-05

	Kickdown switch position	The kickdown switch (S16/6) is located in the footwell behind the accelerator pedal.	
	Kickdown switch task	Influencing the shift program of the electronic transmission control.	
	Kickdown switch design	The kickdown switch (S16/6) consists of a spring-tensioned electrical switch contact.	
	Kickdown switch function	When the kick-down switch (S16/6) is operated via the accelerator pedal a	

		signal is passed on to the ETC control module (N15/3). Based on this information the ETC control module (N15/3) actuates the solenoid valves so that the upshifts and downshifts take place at higher engine speed.	
--	--	---	--