


**Engine** 133, 152, 156, 157, 176, 177, 178, 256, 264, 266, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 607, 626, 629, 640, 642, 646, 651, 654, 656

#### Open clutch

- 1 Slide nose (2) of catch spring (3) to position (B).

 Never pull on the eyelet (1).  
The catch spring (3) will lose its pretension otherwise.

- 2 Detach hose on component.
- 3 Check sealing ring for damage.

 
If damaged




Replace hose.

#### Close clutch

- 4 Slide nose (2) of catch spring (3) to position (A).
- 5 Slide hose onto component until the catch spring (3) latches.

 Ensure clean free of grease connections.

- 6 Check connection by pulling a little at the hose.

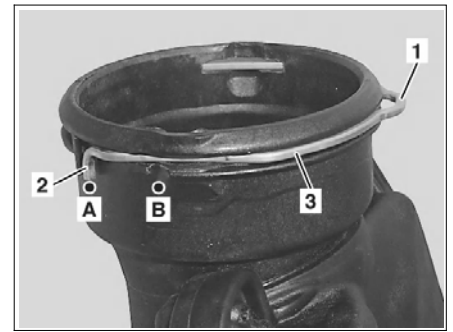

P09.41-2318-01