






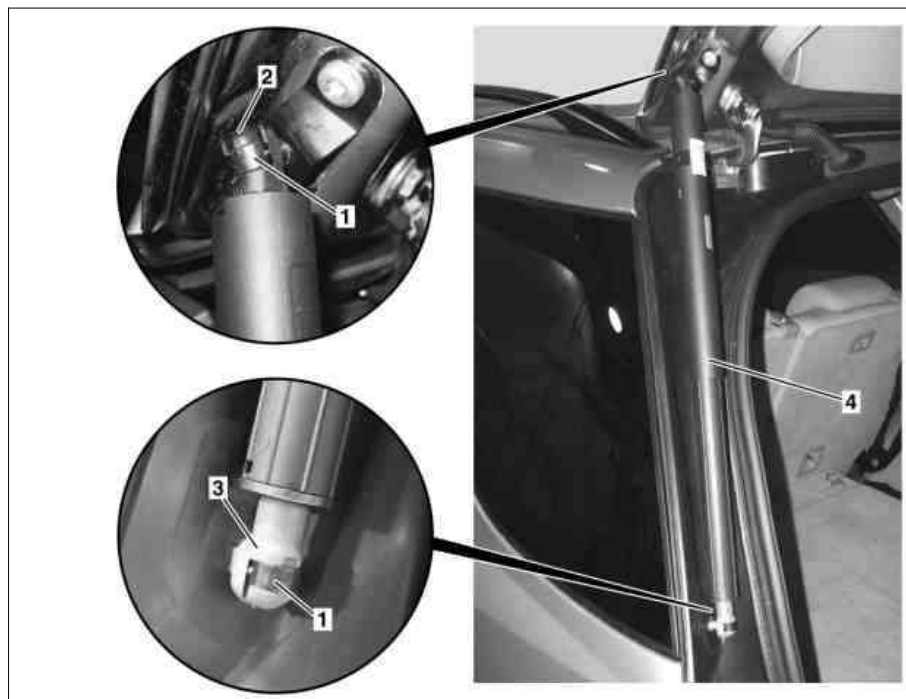

Model 164
Model 166

Shown on model 164.1 with code (890)
Automatic rear-end door

- 1 Fuse
- 2 Upper ball head
- 3 Lower ball head
- 4 Gas-filled strut



P72.20-2445-06

 Danger!	Risk of injury from fingers being pinched or jammed when working on gas struts under pressure	Only remove and install pneumatic springs when they are not under tension and when the components are properly secured.	AS00.00-Z-0012-01A
 Danger!	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
	Remove/install		
1	Open liftgate		
2	Support liftgate 000 588 11 62 00 Major assembly mount		WS01.00-P-0092B
3	Lift retainer (1) on upper ball head (2) and remove lower ball head (2)	 Installation: Insert retainer (1) into upper ball head (2), then press on upper ball head (2).	
4	Lift retainer (1) on lower ball head (3), remove lower ball head (3) and remove gas filled (4)	 Installation: First insert retainer (1) into upper ball head (3), then press on upper ball head (3).	
 Danger!	Risk of injury caused by drilling gas-filled assemblies or components (noncombustible gases)	Wear safety glasses and a face mask.	AS00.00-Z-0006-01A
5	Dispose of gas-filled strut (4)		
6	Install in the reverse order		