

Pop-up screen message: DISPLAY IS TOO HOT...

If the message "DISPLAY IS TOO HOT ..." appears, the display is too hot. For protection the light will be shut off. When the display has cooled down the light will be automatically switched on.

 
Anti-theft system

If the power supply to the MCS has been interrupted, "PLEASE ENTER SECURITY CODE" will appear on the display when it is next switched on. The MCS will only work after the five digit code has been entered using the number keypad.

The code number is printed on the RADIO CODE CARD in the owner's portfolio. Keep the RADIO CODE CARD in a safe place.

Entering the code number

Switch the MCS on, see page 10. "PLEASE ENTER SECURITY CODE" will appear on the display. Use the number keys to enter the desired security code, e.g.

 for 27001.

After entering the correct numerical code press the soft-key , "OK", the MCS starts. If a wrong number is entered you have to enter the complete numerical code again.

If an incorrect numerical code has been entered and confirmed, "PLEASE ENTER SECURITY CODE" will reappear on the display. The correct code must be entered once again. If an incorrect code is entered three times, "WAIT" will appear on the display and the MCS will be locked out for about 10 minutes. If after 10 minutes an incorrect code is entered again, "WAIT" will appear again and the MCS will be locked out for about 10 minutes. After that you have to wait 1 hour to re-enter the code.

Note:

The lockout time will only elapse if the MCS remains switched on.