




MODEL 129

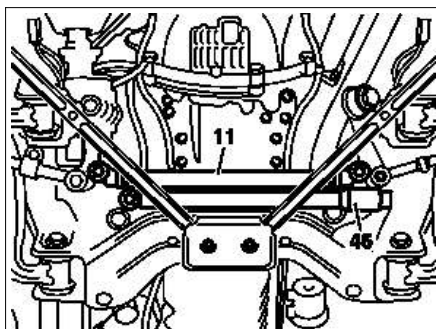

P46.40-0200-01

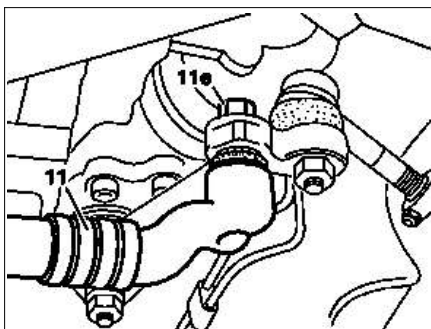

P46.40-0201-01

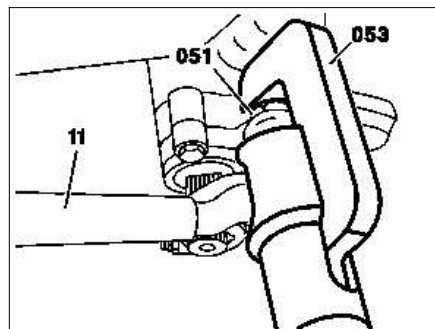

P46.40-0202-01

Modification notes

10.9.03	Reference to adjusting toe on front axle replaced by reference to chassis alignment	Step 8	
---------	---	--------	--


☒ ☒	Remove/install		
	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer.	AS00.00-Z-0010-01A
ⓘ	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
1	Remove engine compartment paneling		AR61.20-P-1105AB
2	Detach steering damper (46) from drag link	Nm	*BA46.40-P-1001-03A
3	Unscrew nuts (11e) of drag link (11)	<div style="border: 1px solid black; padding: 2px;">i</div> Counter the ball pin using an Allen wrench if necessary. <div style="border: 1px solid black; padding: 2px;">Nm</div>	*BA46.40-P-1001-04A
4	Install thrust piece (051)	☒	*129589106300
5	Press drag link (11) off steering gear pitman arm and steering idler arm using puller (053)	<div style="border: 1px solid black; padding: 2px;">i</div> Installation: Clean grease off tapers and press the ball joints of the drag link securely into the steering arms. <div style="border: 1px solid black; padding: 2px;">☒</div>	*124589023300
6	Check joints of drag link (11) for play and damaged rubber boots	<div style="border: 1px solid black; padding: 2px;">i</div> Replace drag link if necessary.	
7	Install in the reverse order		
8	Check front wheel toe and adjust if necessary	See: ↓ Perform a wheel alignment check	AR40.20-P-0200A

Nm Steering damper

Number	Designation		Model 129
BA46.40-P-1001-03A	Steering damper to drag link	Nm	40


Nm Drag link

Number	Designation		Model 129
BA46.40-P-1001-04A	Self-locking nuts of drag link	Stage 1 Nm	50
		Stage 2 °	-

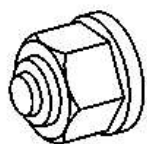

129 589 10 63 00

Thrust piece

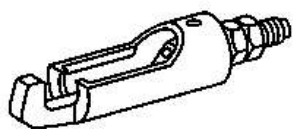

124 589 02 33 00

Puller