


GF27.10-P-3023GB	Function of shift lock override	5.2.99
------------------	---------------------------------	--------

**TRANSMISSION 722.6 in MODEL 163  
with touch shift**

- 89 R/P locking solenoid
- 90 Locking lever
- 90a Shoulder
- 95 Flap

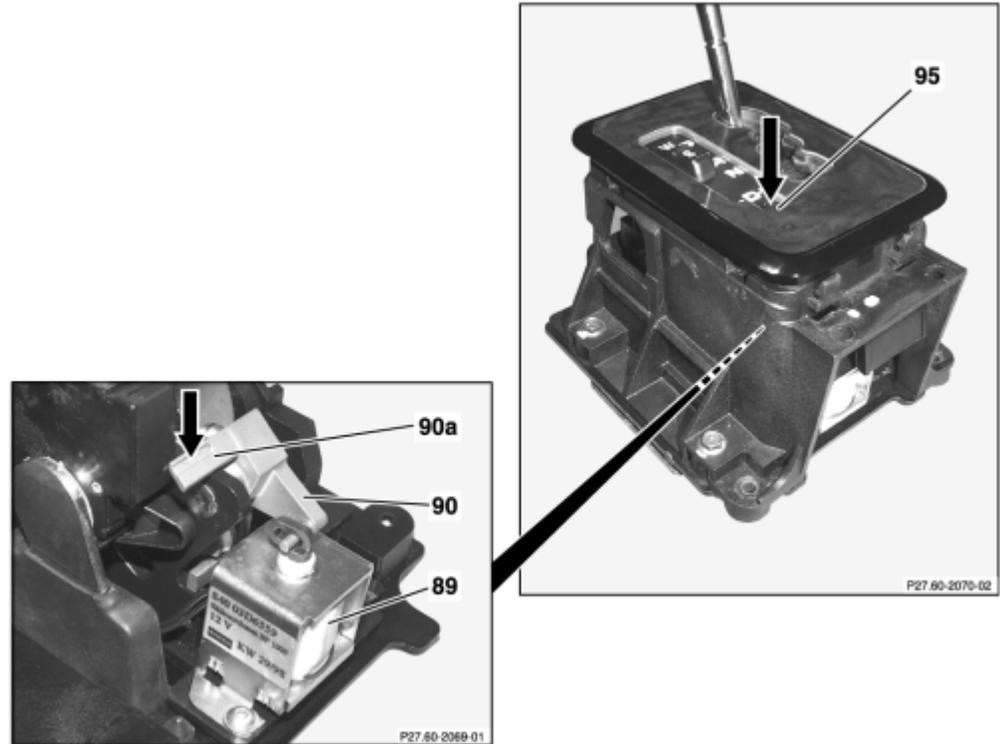

P27.60-2063-06

**Operation**

If it is not possible to engage a drive position from selector lever position "P" due to a mechanical or electrical/electronic fault, the selector lever position "P" lock can be released using the shift lock override function. To do this, a suitable tool must be guided through the flap (95) onto the web (90a) and the web pressed gently downwards (arrow). The lock lever (90) releases the selector lever. The selector lever can be moved from position "P" by simultaneously operating the lock lever.

Location / task / design / function of R/P lock		<a href="#">GF27.60-P-5103GB</a>
Parking lock, location / task / design / function		<a href="#">GF27.10-P-5100GA</a>