
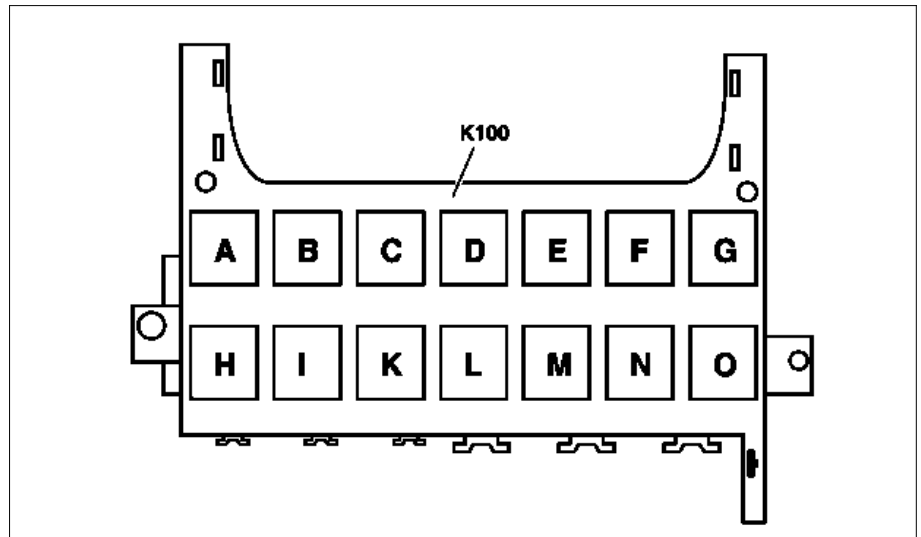


| | | |
|---------------------|---|---|
| GF54.15-P-1257-06BK | Relay assignment of relay and fuse box in passenger-side interior |  |
|---------------------|---|---|

K100 Relay and fuse box
A to O Plug location



P54.15-2753-05

| Position | Relay | Designation |
|----------|--------|---|
| A | K100kA | ● Circuit 15R relay (2) (SA) |
| B | K100kB | ● Circuit 15R relay (1) |
| C | K100kC | ● Fanfare horn relay |
| D | K100kD | ● Heated rear window relay |
| E | K100kE | ● Wiper stage relay 1/2 |
| F | K100kF | ● Wiper ON/OFF relay |
| G | K100kG | ● Circuit 15 relay (1) |
| H | K100kH | ● Backup relay |
| I | K100kI | ● Air pump relay (for engine 266) |
| K | K100kK | ● Fuel pump relay |
| L | K100kL | ● Engine circuit 87 relay |
| M | K100km | ● Starter relay |
| N | K100kN | ● Circuit 87F relay |
| O | K100kO | ● Circuit 15 relay (2) (SA: xenon, portable CTCL) |