


## FUSE/RELAY BOX

## TOP VIEW

AS OF MY 1986

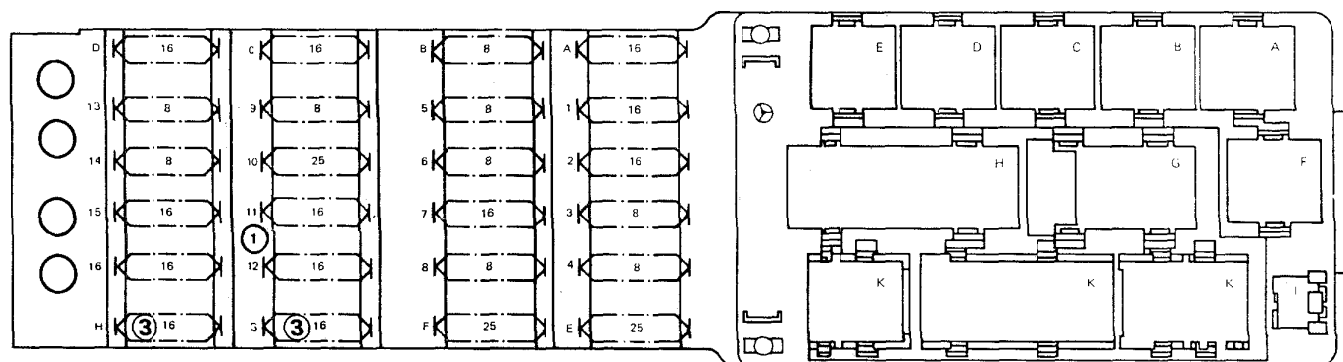

Driving Direction

RELAY CODE	RELAY USE	RELAY CODE	RELAY USE
A	K5 Power Seat Relay	G	K18 Seat Belt Warning Relay ⑤
B	K10 Auxiliary Fan Preresistor Relay	H	K29/1 First Gear Start Relay ⑥
C	K9 Auxiliary Fan Relay	I	N10 Combination Relay
D	K9k2 Auxiliary Fan Relay Preresistor ⑥		V1 Power Seat Diode ④
E	K2 Headlamp Washer Relay		V5 Parking Brake/ASR/Electronic Accelerator ⑥
F	F14 Auxiliary Fuse Holder	K	N7 Exterior Lamp Failure Monitoring Unit
	K17 Air Injection Relay ⑥		
	K4 Power Window Relay		
	K24 Convenience Relay ②		

REVISIONS: ① IN LINE FUSE REPLACES FUSE NO. 12 AS OF CHASSIS END NUMBER A292112, F023505  
 ② AS OF MY 1990  
 ③ 25 AMP AS OF MY 1990

④ REPLACED BY K24 AS OF BY 1990  
 ⑤ COUPE MODEL ONLY  
 ⑥ AS OF MY 1992, MODELS 430E/500E