


AR67.39-P-4170N	Removing and installing rear control module	29.1.99
-----------------	---	---------

MODEL 215



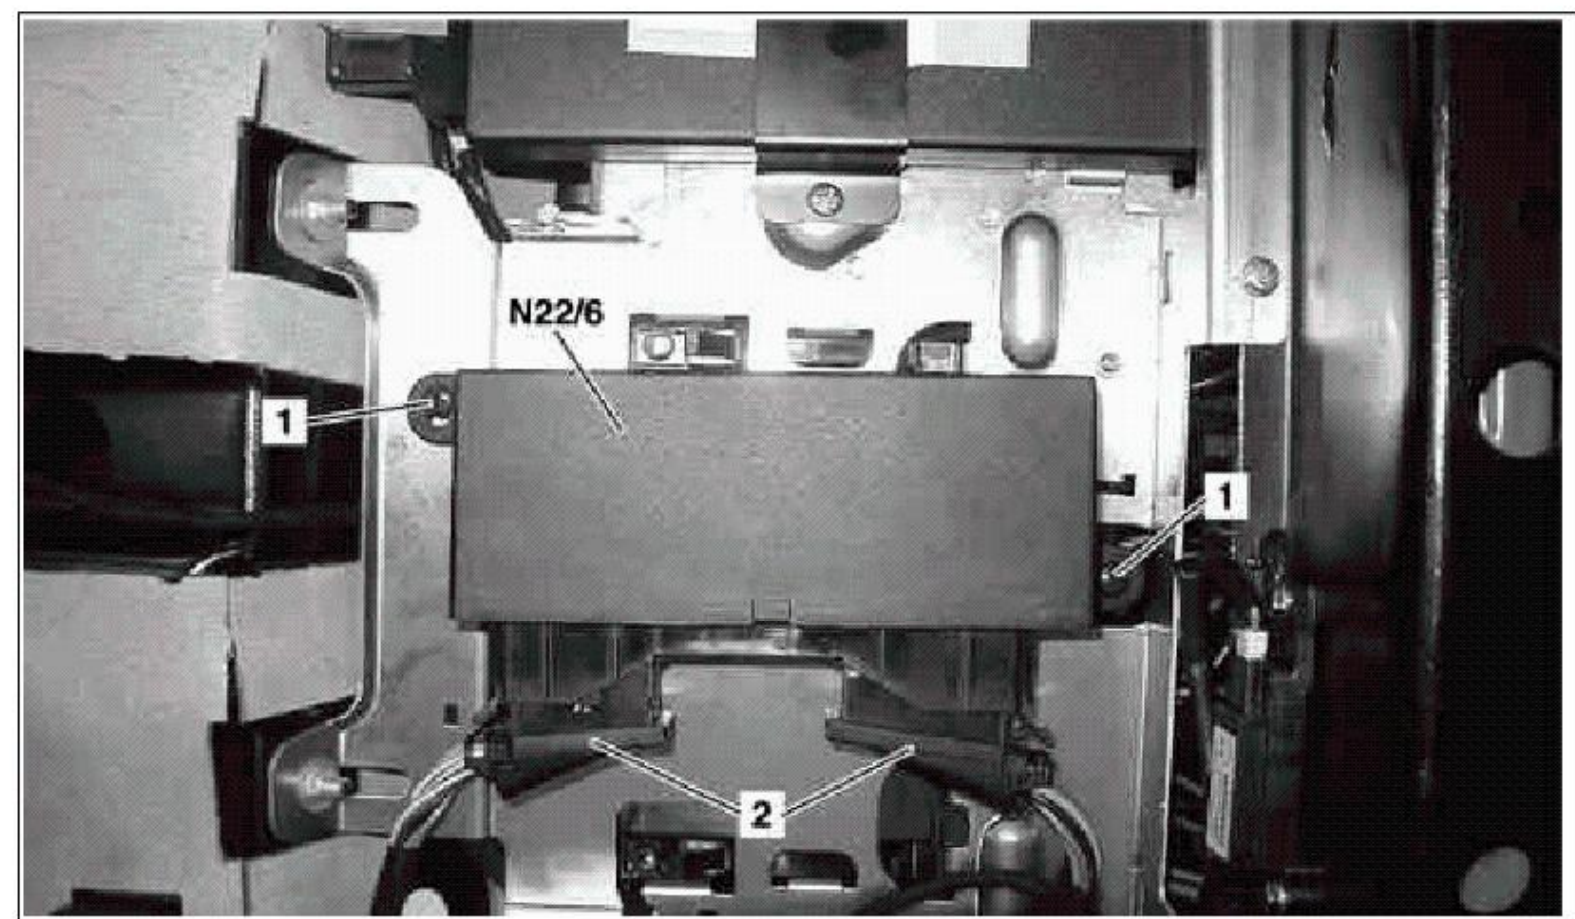

- 1 Screws
- 2 Connectors
- N22/6 Rear control module






P67.39-2013-05

Document Page width Continuous document Validity off Page 1 of 1

Document Picture Operation steps

 	Removal, installation		
1	Remove rear seat cushion	 Only on right side	AR91.12-P-1020N
2	Release connectors (2) and disconnect		
3	Unscrew screws (1) and remove rear control module (N22/6)	 When replacing the rear control module (N22/6) perform control module adaptation with STAR diagnosis	
4	Install in opposite order		

   09:39 01/01/2015